

Troubleshooting

Symptom	Possible Cause	Solution
Master Control LEDs do not light.	• No power available to Master Control.	• Ensure Master Control is properly wired and power is turned on.
All LEDs flash when each Master Control button is pressed.	• Master Control is not activated to the system.	• See “Activating Controls” in the RadioRA® Setup Guide (P/N 044-001) or the Chronos™ Setup Guide (044-037).
Lights do not respond to a button press.	• Master Control is not properly programmed.	• See “Button Programming” in the RadioRA Setup Guide (P/N 044-001) or the Chronos Setup Guide (044-037).

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by Lutron Electronics Co. could void the user's authority to operate this equipment.

Technical Assistance

If you have questions concerning the installation or operation of this product, call the **Lutron Technical Support Center**. Please provide exact model number when calling. (800) 523-9466 (U.S.A., Canada, and the Caribbean)
Other countries call (610) 282-3800
Fax (610) 282-3090
Visit our web site at www.lutron.com

Limited Warranty

Lutron will, at its option, repair or replace any unit that is defective in materials or manufacture within one year after purchase. For warranty service, return unit to place of purchase or mail to Lutron at 7200 Suter Rd., Coopersburg, PA 18036-1299, postage pre-paid.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, AND THE IMPLIED WARRANTY OF MERCHANTABILITY IS LIMITED TO ONE YEAR FROM PURCHASE. THIS WARRANTY DOES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REINSTALLATION, OR DAMAGE RESULTING FROM MISUSE, ABUSE, OR IMPROPER OR INCORRECT REPAIR, OR DAMAGE FROM IMPROPER WIRING OR INSTALLATION. THIS WARRANTY DOES NOT COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES. LUTRON'S LIABILITY ON ANY CLAIM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, DELIVERY, OR USE OF THE UNIT SHALL NEVER EXCEED THE PURCHASE PRICE OF THE UNIT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

These products may be covered under one or more of the following U.S. patents: 4,835,343; 4,924,349; 4,954,768; 5,248,919; 5,399,940; 5,637,930; 5,736,965; 5,798,581; 5,838,226; 5,848,054; 5,905,442; 5,982,103; D422,567; D436,930; D453,742; D456,783; D461,782; D465,460; D465,770; D466,090; D466,091; D466,484; D475,024; D475,025 and corresponding foreign patents. U.S. and foreign patents pending. Lutron, Claro and RadioRA are registered trademarks and Chronos and Satin Colors are trademarks of Lutron Electronics Co., Inc.

© 2004 Lutron Electronics Co., Inc.

Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036-1299, U.S.A.
Made and printed in the U.S.A. 3/04 P/N 044-039 Rev. B

LUTRON®

English

RadioRA®

Wireless Home Lighting Control

Installation Instructions for Large Button Wall-Mounted Master Controls

Please Leave for Occupant

Large Button Wall-Mounted Master Control

RALB-2W-SD, RALB-5W-AO, RALB-5W-RL
RBLB-2W-SD, RBLB-5W-AO, RBLB-5W-RL

120 V~ 50/60 Hz

Read all instructions completely before installation.

Important Notes

 


Note: Use only Lutron wallplates with these devices.


1. Install in accordance with all national and local electrical codes.
2. A neutral wire connection is required for the Wall-Mounted Master control.
3. Do not paint controls or wallplates.
4. **Clean with a soft damp cloth only.** Do not use any chemical cleaners.
5. Operate in ambient temperatures between 0°C (32°F) and 40°C (104°F).
6. Recommended wallbox depth is 2½ in. (64 mm) minimum.
7. The range and performance of the *RadioRA* System is highly dependent on a variety of complex factors such as:
 - Distance between system components
 - Geometry of the home
 - Construction of walls separating system components
 - Electrical equipment located near system components
8. Do not mix *RadioRA* “A” and “B” frequency products within the same system. Products with different frequencies **are not** compatible.

Note: Request Application Note #41 on how to retrofit a *RadioRA* Wall-Mounted Master Control into an existing home.


P/N 044-039

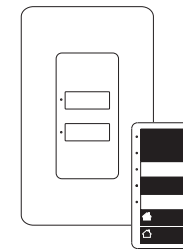

 **RALB-2W-SD
RBLB-2W-SD**
2 Button Master Control with
Programming Button Kit (RALK-PGM)

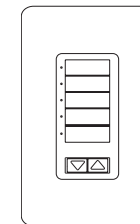

 **RALB-5W-RL
RBLB-5W-RL**
5 Button Master Control with
Raise/Lower

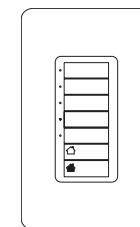

**RALB-5W-AO
RBLB-5W-AO**
5 Button Master Control with All
On/All Off

 
LUTRON®

Installation

Installing a Wall-Mounted Master Control in a newly installed wallbox.

✓ **Check off Steps as completed.**

Step 1 Turn power off at circuit breaker panel or remove fuse from fusebox.



Important Wiring Information

 
When making wire connections, follow the recommended strip lengths and combinations for the supplied wire connectors. **Note:** Wire connectors provided are suitable for **copper wire only**. For aluminum wire, consult an electrician.

Small:

Strip insulation 3/8 in. (10 mm) for 14 AWG wire
Strip insulation 1/2 in. (13 mm) for 16 or 18 AWG wire
Use to join one 14 AWG supply wire with one 16 or 18 AWG control wire.

Large:


Strip insulation 1/2 in. (13 mm) for 10, 12 or 14 AWG wire
Strip insulation 5/8 in. (16 mm) for 16 or 18 AWG wire
Use to join one or two 12 or 14 AWG supply wires with one 10, 12, 14, 16, or 18 AWG control wire.

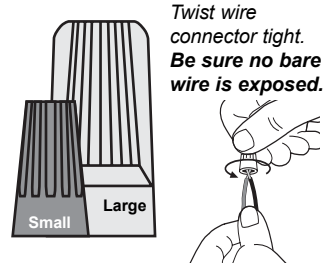


Step 2 Wire the Control.

Using the wire connectors provided:

 - Connect the **black** control wire to the **HOT** wire coming from the breaker panel.
- Connect the **white** control wire to the **NEUTRAL** wire coming from the breaker panel.

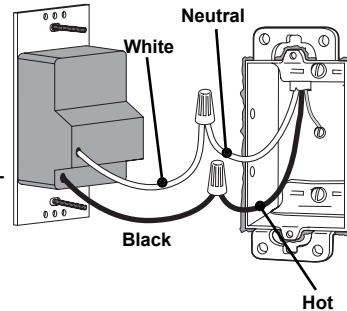


Wiring Diagram

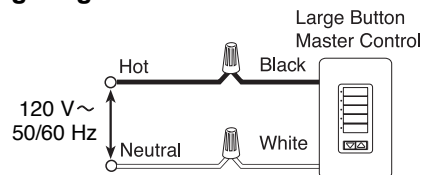 


Step 3 Attach Lutron® Claro® or Satin Colors™ wallplate adapter and wallplate.

 - Loosely install Master Control mounting screws.
- Tighten wallplate adapter mounting screws snug.
- Tighten Master Control mounting screws until wallplate adapter is flush to wall (do not over-tighten).
- Snap wallplate onto wallplate adapter, and verify button kit is not submerged.
- If button kit is submerged, loosen mounting screws appropriately.

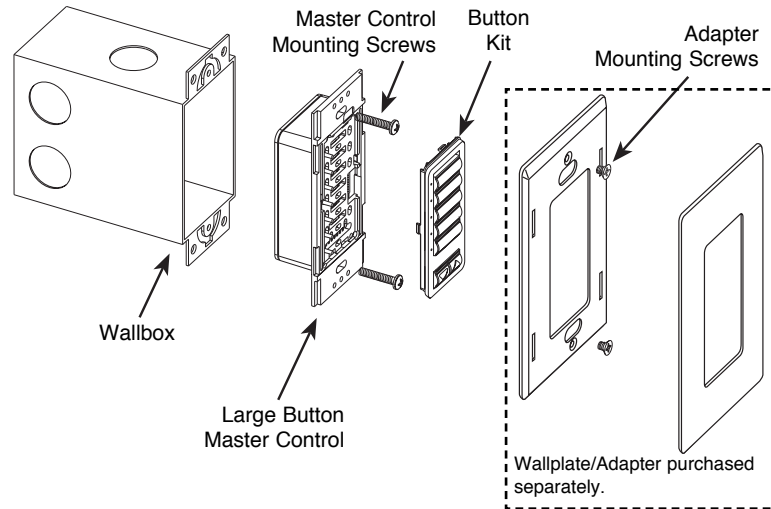

Operation of the Master Control

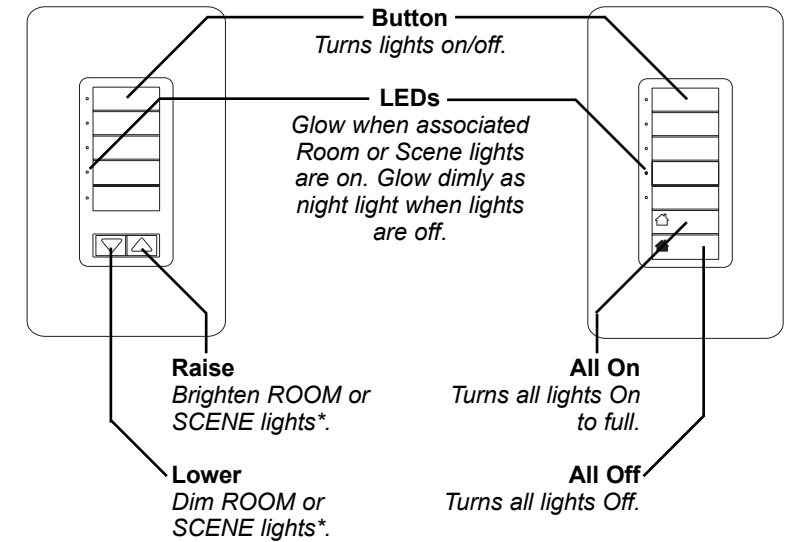 

* To select the ROOM or SCENE button you wish to Raise or Lower, quickly tap that button twice.



NOTE: Master Controls will not operate until they have been programmed.

2 Button Master Control Programming: To program a 2 Button Master Control, install the Programming Button Kit (RALK-PGM), make the programming changes, and then reinstall the 2 button kit. **Retain the Programming Button Kit to make future changes.**

For detailed instructions on programming your Master Control, refer to the Setup and Installation Guide for a RadioRA® Chronos™ System Bridge and Timeclock that is included with a Chronos or the RadioRA Setup Guide that is included with an RF Signal Repeater.

Step 4 Turn power ON.

