


Maestro® Fan Programming Reset Procedures

Maestro® Fan wall controls communicate with a canopy module. If it is necessary to reset the unit, please follow the appropriate procedure for your specific Fan control.

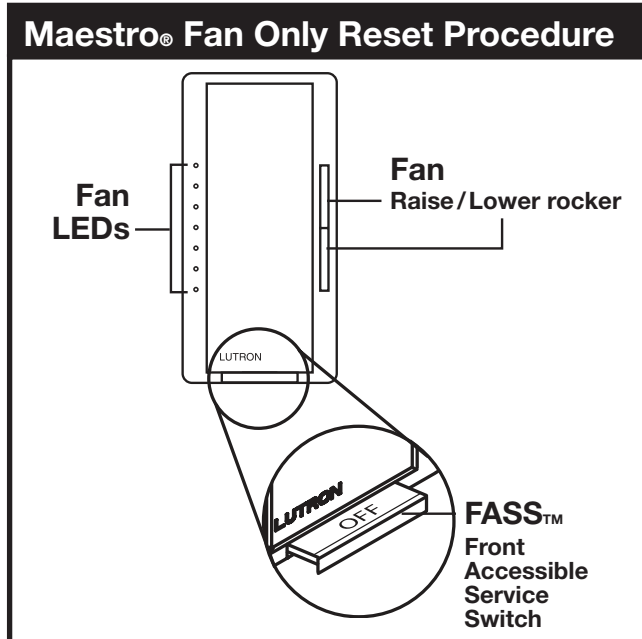


If resetting a Maestro® Fan/Light wall control
 See Application Note #421 at lutron.com


Note: Resetting one set of controls (1 wall station + 1 canopy module) will NOT reset all sets of wall controls.

If more than one Maestro Fan wall control is not communicating properly you must reset each of the controls. Pull the FASS out on all wall controls that need to be reset (step 1). Once all FASS have been pulled, proceed with the remaining steps one control at a time. Make sure the previous control has been reset and is on and functioning properly before you move on to the next.

4. While continuing to hold the “Fan Lower” rocker, single tap the “On/Off” button. Fan will spin.

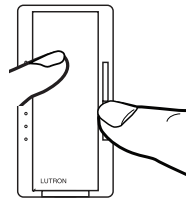


1. Pull the “FASS” (Front Accessible Service Switch) out and wait 5 seconds.

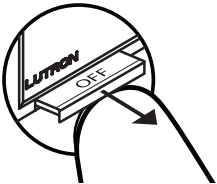


2. Press and hold the “Fan Lower” rocker.




3. Push the “FASS” in.

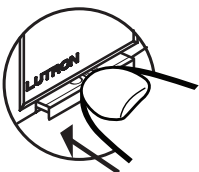


5. Release the “Fan Lower” rocker.

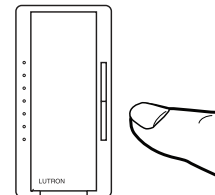

6. Pull “FASS” out and wait 5 seconds.

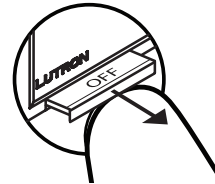

7. Push “FASS” back in. LEDs will scroll a few seconds. Fan will spin at fastest speed.

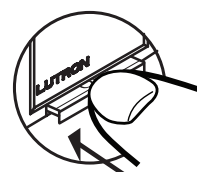

If the “Raise/Lower” rocker controls the Fan properly, the procedure has been completed successfully.