



| Symbol | Model Number | Description | Qty |
|--------|----------------|--|-----|
| | RMJS-5R-DV-B | PowPak switching module | 1 |
| | LRF2-VKLB-P-WH | Radio Powr Savr wireless corner-mount vacancy sensor | 1 |
| | PJ2-2B-GWH-L01 | Pico wireless 2-button control | 2 |
| | PICO-WBX-ADAPT | Pico wallbox adapter | 2 |
| | | | |

Control Functionality

Occupant Enters:

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually.

When Occupied:

Manual: Occupant uses wall switch to turn all lights off.

Occupant Exits:

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.