



Symbol	Model Number	Description	Qty
	FCJS-010	Wireless Fixture Control with 0-10V	2
	FC-SENSOR	PowPak Fixture Sensor	2
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	1
	PICO-WBX-ADAPT	Pico wallbox adapter	1

## Control Functionality

### Occupant Enters:

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%.

### When Occupied:

Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.  
 Manual: Occupant uses wall dimmer to set desired light levels for all lights.

### Occupant Exits:

All lights automatically turn off 15 minutes after all occupants exit.

Add a Vive wireless hub to enable simple setup and re-zoning, system monitoring, timeclock functionality, and advanced integration.

FCJS models are capable of controlling up to 3 ballasts or drivers. Review the "Vive PowPak Fixture Controls" submittal document for more design details. Want to add a Vive wireless hub for more features? Go to [lutron.com/vive](http://lutron.com/vive) for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.