

## Vierti® Advanced Programming Mode

---

The *Vierti* Dimmer contains an Advanced Programming Mode (APM) that allows users to customize their Dimmer to meet specific needs. This document serves as a supplement to the *Vierti* installation instruction sheets. Before entering APM, it is important to have a good understanding of the advanced features.

### Explanation of Advanced Features

#### Locked Preset:

With a locked preset level, the Dimmer will always turn on to the predetermined locked level when it is turned on with a touch of the Toggle Region.

#### ON Fade Rate:

Controls how quickly the lights fade up when the Dimmer is turned on. Fade times from off to maximum light output can be as fast as 0.5 seconds or as slow as 5 seconds.

#### OFF Fade Rate:

Controls how quickly the lights fade down when the Dimmer is turned off. Fade times from maximum light output to off can be as fast as 0.5 seconds or as slow as 15 seconds.

#### Delayed Fade Wait Time:

Controls the length of the wait period upon entering a delayed fade-to-off.

#### Sound ON/OFF:


Enable or disable audible feedback.

#### LED Brightness:

Select between high, medium, and low brightness for the LEDs.

#### High/Low End Trims:

Select maximum and minimum available light levels.

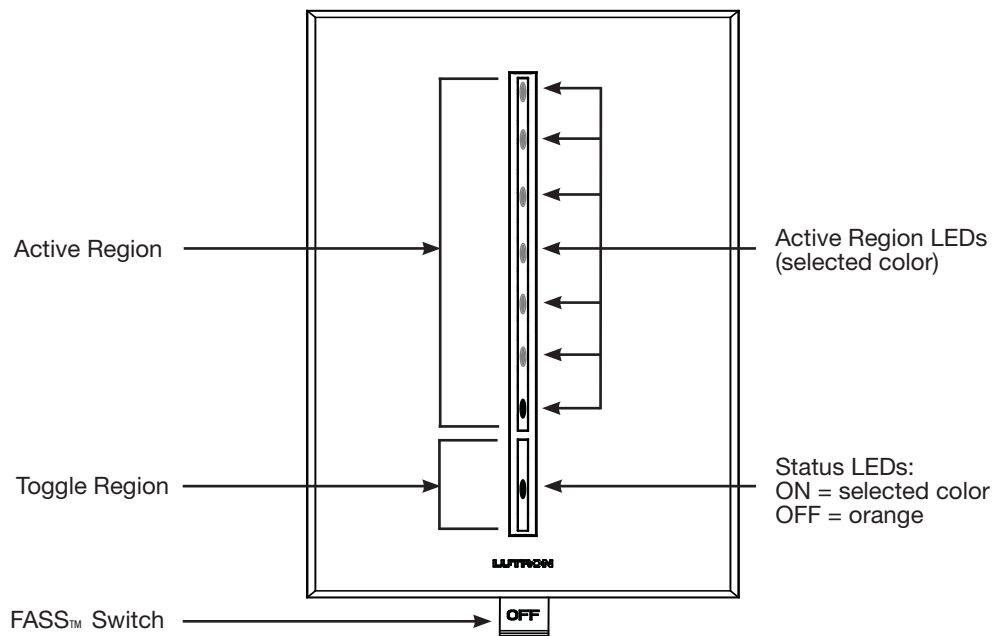

## Using Advanced Programming Mode


APM consists of two modes of operation:

1. **Main Menu Mode** allows the user to select a feature to be modified.
2. **Selection Mode** allows the user to modify the feature that has been selected in **Main Menu Mode**.

### Notes:

1. Once a feature has been modified, the changes are automatically saved.
2. There is a 1 minute timer that will automatically exit Advanced Programming Mode if there is no activity on the Dimmer.

### Entering APM

1. Pull the FASS™ switch down to the OFF position. 
2. Touch and hold the Toggle Region (see Figure below).
3. While continuing to hold the Toggle Region, push the FASS switch up into the ON position. Continue to hold the Toggle Region for approximately four seconds.
  - A beep will indicate entry to APM.
  - The Off Status LED and LED 1 will begin to blink, indicating entry to **Main Menu Mode**.

### Entering Selection Mode


1. Touch the Active Region LED that represents the feature to be modified (Example: LED 6 - LED Brightness).
2. Quickly touch and release the Toggle Region.

The selected feature can now be modified.

Note: The ON/OFF Status LED will blink alternately to indicate that **Selection Mode** has been entered.

While in **Selection Mode**, please observe the following:

- Available settings are represented by dim Active Region LEDs.
- The selected setting is represented by a bright Active Region LED.

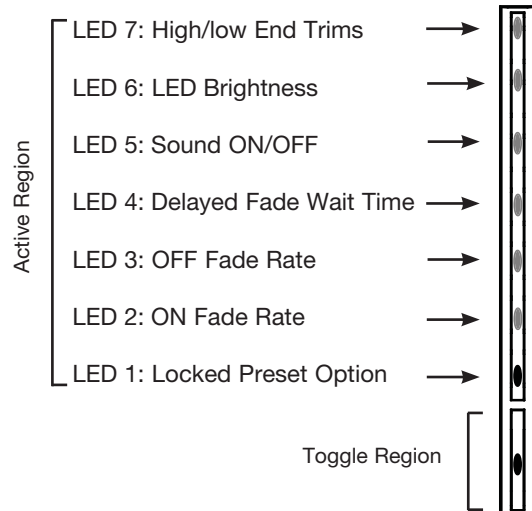

### Modifying the Selected Feature

1. Touch the Active Region LED that represents the desired setting.
2. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

### Exiting APM

While in **Main Menu Mode**, touch and hold the Toggle Region for approximately four seconds.

A beep will indicate the return to normal operation.

## Preset Options

Two options are available for the preset light level: Locked Preset and Unlocked Preset.

### Locked Preset:

When programmed for a Locked Preset, the Dimmer will always turn on to the predetermined locked level when the Dimmer is turned on with a touch of the Toggle Region.

### Unlocked Preset:

When programmed for an Unlocked Preset, the Dimmer's light level will be the same as it was the last time the Dimmer was on.

## Selecting a Preset Option

1. While in **Main Menu Mode**, touch Active Region LED 1. The LED will blink to indicate the selection.
2. Quickly touch and release the Toggle Region.

## Selecting Locked Preset

1. Touch the Active Region to select the desired Locked Preset light level.  
The lights will fade to the selected level. An LED will also brighten to reflect the selected level.
2. Quickly touch and release the Toggle Region to save the Locked Preset and to return to **Main Menu Mode**.

## Selecting Unlocked Preset


1. Touch and hold the Toggle Region until the Active Region LEDs turn off.
2. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

Note: While selecting Preset Options, the Active Region LEDs are not lit, indicating the Unlocked Preset setting.

## Fade Rates


### Selecting ON Fade Rate

1. While in **Main Menu Mode**, touch Active Region LED 2. The LED will blink to indicate the selection.
2. Quickly touch and release the Toggle Region.  
A bright Active Region LED will indicate the selected fade rate.
3. Touch the Active Region LED that represents the desired fade rate (refer to the picture on the right).
4. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

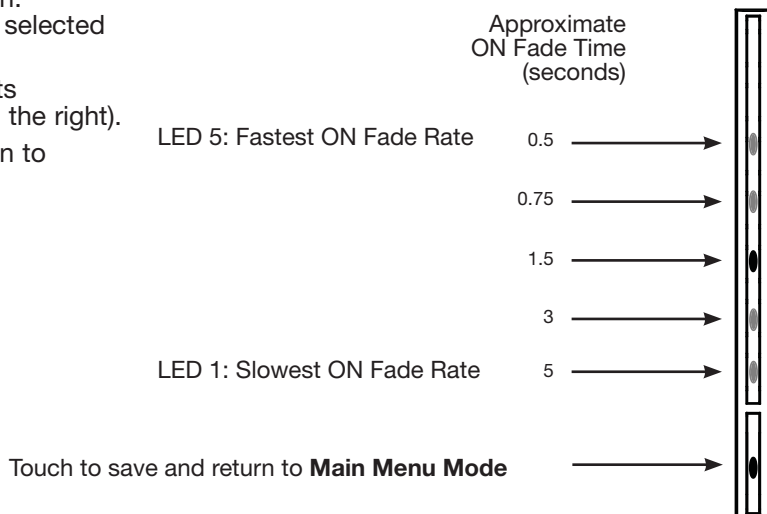


### Selecting OFF Fade Rate

1. While in **Main Menu Mode**, touch Active Region LED 3. The LED will blink to indicate the selection.
2. Quickly touch and release the Toggle Region.  
A bright Active Region LED will indicate the selected fade rate.
3. Touch the Active Region LED that represents the desired fade rate (refer to picture below).
4. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

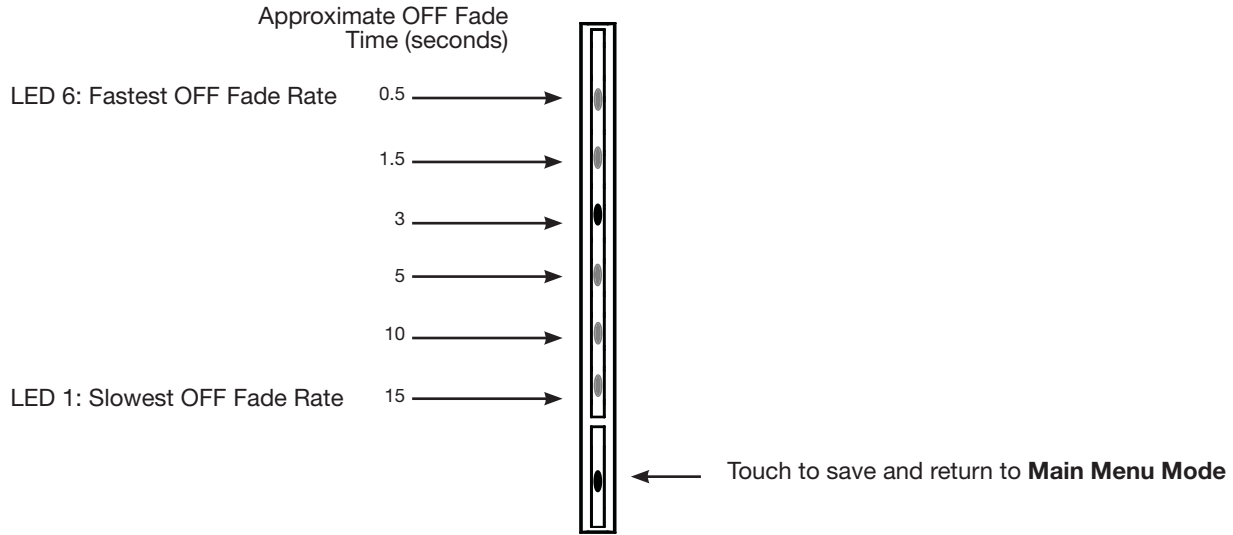


### Selecting Delayed Fade Wait Time

1. While in **Main Menu Mode**, touch Active Region LED 4. The LED will blink to indicate the selection.
2. Quickly touch and release the Toggle Region.  
A bright Active Region LED will indicate the selected wait time.
3. Touch the Active Region LED that represents the desired wait time (refer to picture below).
4. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

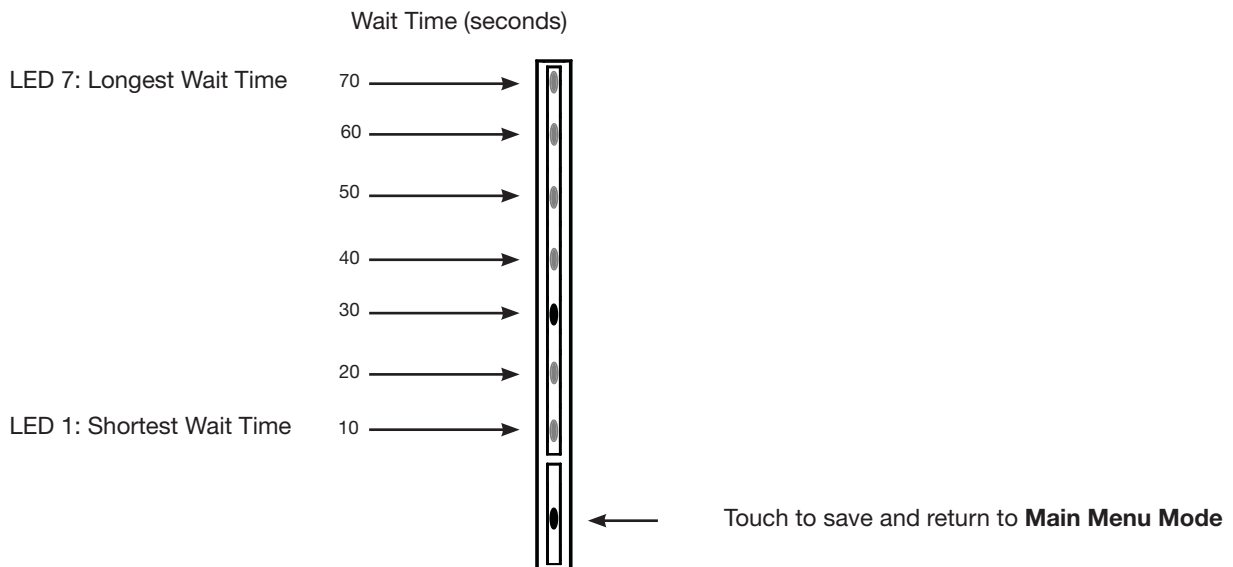


### Selecting Sound ON or OFF

1. While in **Main Menu Mode**, touch Active Region LED 5. The LED will blink to indicate the selection.
2. Quickly touch and release the Toggle Region.  
A bright Active Region LED will indicate the selected sound setting.
3. Touch Active Region LED 2 for Sound ON, or touch Active Region LED 1 for Sound OFF.
4. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

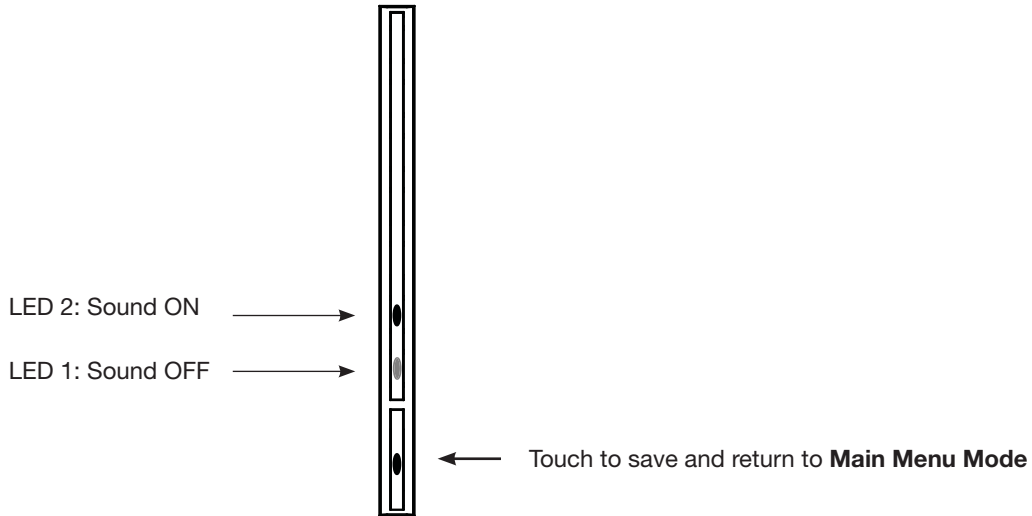

### Selecting LED Brightness

1. While in **Main Menu Mode**, touch Active Region LED 6. The LED will blink to indicate the selection.
2. Quickly touch and release the Toggle Region.  
A bright active region LED will indicate the selected brightness.
3. Touch the Active Region LED that represents the desired brightness (refer to picture below).
4. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

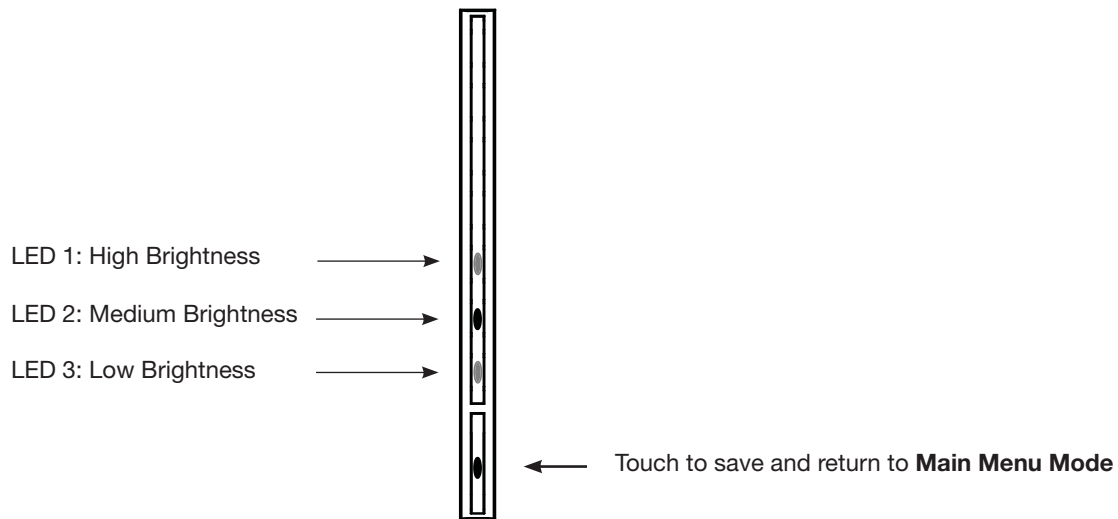

## Selecting High and Low End Trim

The Dimmer includes a trimming feature that allows the user to select both the maximum and minimum light levels.

1. While in **Main Menu Mode**, touch Active Region LED 7. The LED will blink to indicate the selection.
2. Quickly touch and release the Toggle Region.

Bright active Region LEDs will indicate the selected High and Low End Trim levels.

### To modify High End Trim:


Touch Active Region LEDs 5, 6, or 7. The lights will fade to their new maximum level.

### To modify Low End Trim:

Touch Active Region LEDs 1, 2, or 3. The lights will fade to their new minimum level.

3. Quickly touch and release the Toggle Region to return to **Main Menu Mode**.

Upon returning to **Main Menu Mode**, both High and Low End Trim will be saved.

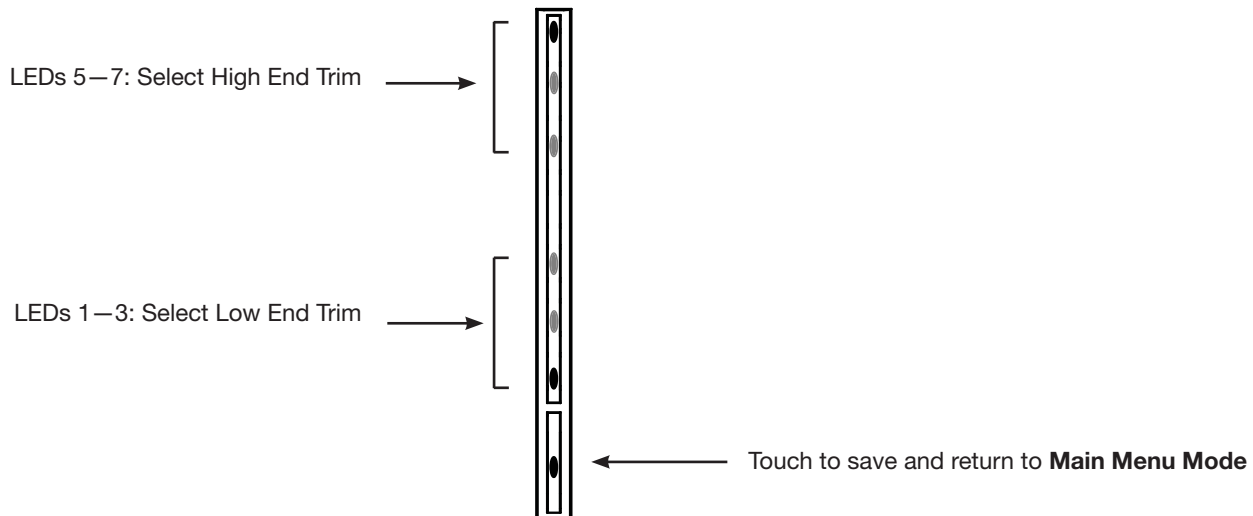

## Restoring Factory Defaults

To return the dimmer to its original factory settings, please do the following:

1. Pull the FASS™ switch down to the OFF position.
2. Touch and hold the Toggle Region.
3. While continuing to hold the Toggle Region, push the FASS switch up to the ON position. Continue to hold the Toggle Region for approximately four seconds.
4. The unit will enter APM; continue to hold the Toggle Region for another six seconds.
5. A beep will indicate that the unit has been restored to its factory defaults.

## Factory Defaults

**Locked Preset:**

Disabled

**ON Fade Rate:**

From off to the maximum light level is about 1.5 seconds.

**OFF Fade Rate:**

From the maximum light level to off is about three seconds.

**Delayed Fade Wait Time:**

30 seconds.

**Sound:**

Turned ON.

**LED Brightness:**

is set to medium.

**High End Trim:**

Set to its maximum level.

**Low End Trim:**

Set to its minimum level.

## Advanced Programming Mode in the Vierti® Switch

Advanced Programming Mode is included in the *Vierti* switch. Operation of APM in the *Vierti* switch is identical to the operation in the *Vierti* dimmer.

## Features that can be Modified in the *Vierti* Switch

Sound ON/OFF

LED Brightness

---

## Lutron Contact Numbers

### WORLD HEADQUARTERS USA

Lutron Electronics Co., Inc.  
7200 Suter Road  
Coopersburg, PA 18036-1299  
TEL: +1.610.282.3800  
FAX: +1.610.282.1243  
Toll-Free: 1.888.LUTRON1  
Technical Support: 1.800.523.9466  
intsales@lutron.com

### EUROPEAN HEADQUARTERS United Kingdom

Lutron EA Ltd.  
6 Sovereign Close  
London, E1W 3JF United Kingdom  
TEL: +44.(0)20.7702.0657  
FAX: +44.(0)20.7480.6899  
FREEPHONE (UK): 0800.282.107  
Technical Support: +44.  
(0)20.7680.4481  
lutronlondon@lutron.com

### ASIAN HEADQUARTERS Singapore

Lutron GL Ltd.  
15 Hoe Chiang Road  
#07-03, Tower 15  
Singapore 089316  
TEL: +65.6220.4666  
FAX: +65.6220.4333  
Technical Support: 800.120.4491  
lutronsea@lutron.com

### North & South America Technical Hotlines

**USA, Canada, Caribbean:**  
1.800.523.9466  
**Mexico:**  
+1.888.235.2910  
**Central/South America:**  
+1.610.282.6701

### Asia Technical Hotlines

Northern China: 10.800.712.1536  
Southern China: 10.800.120.1536  
Hong Kong: 800.901.849  
Indonesia: 001.803.011.3994  
Japan: +81.3.5575.8411  
Macau: 0800.401  
Taiwan: 00.801.137.737  
Thailand: 001.800.120.665853  
Other Countries: +65.6220.4666

Verti is a registered trademark and FASS is a trademark of Lutron Electronics Co., Inc.

---

**LUTRON.**

Lutron Electronics Co., Inc.  
7200 Suter Road  
Coopersburg, PA 18036-1299 U.S.A.  
Made and printed in U.S.A. 12/10 P/N 048-205 Rev. B