
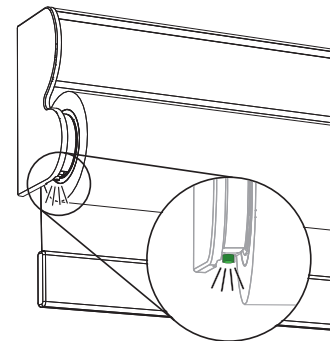
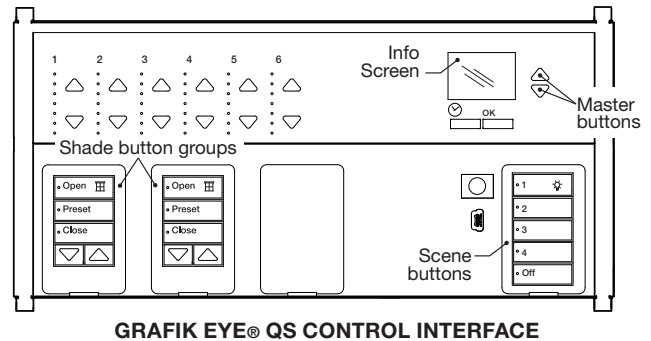



Setup of Sivoia® QS Triathlon® shades with GRAFIK Eye® QS control

Associating Sivoia® QS Triathlon® shades with GRAFIK Eye® QS:

- Make sure the wireless mode of the GRAFIK Eye® QS control is enabled. To check or set:
 - Enter Programming mode: Press and hold the top and bottom Scene buttons simultaneously for 3 seconds. The LED's in the Scene buttons will scroll from top to bottom, confirming the control is in Programming mode, and the Info screen will display the Main menu.
 - Use the Master buttons to highlight "Wireless Mode" in the Main menu, and press the OK button to accept.
 - Use the Master buttons to highlight "Enabled" and press the OK button to accept.
 - The Info screen will display a confirming "Saved" message.
 - Exit Programming mode: Press and hold the top and bottom Scene buttons simultaneously for 3 seconds. The Info screen will go to Scene 1.
- Tap the Shade button on the shade to assign. The Shade button LED will turn on solid green, and the shade will wait in this mode for 30 seconds.
- Choose a Shade button group on the GRAFIK Eye® QS control. Press and hold the Close button in that group for 6 seconds. All LED's in the Shade button group and the Shade button LED will flash then turn off.

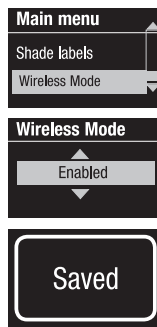


ROLLER SHADE BUTTON

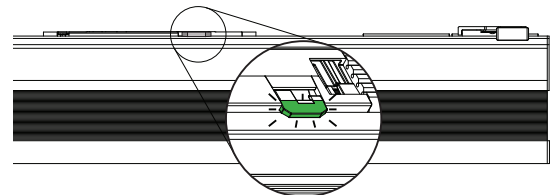

HONEYCOMB SHADE BUTTON

Setting Upper and Lower Limits of a Sivoia® QS Triathlon® shade with GRAFIK Eye® QS:

- Verify that the shade is associated with the intended Shade button group of the GRAFIK Eye® QS control.
- Tap the Shade button on the Sivoia® QS Triathlon® shade. The Shade button LED will turn on solid green, and the shade will wait in this mode for 30 seconds.

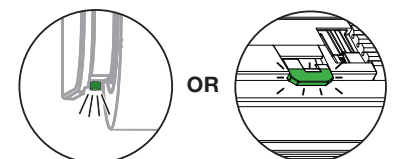


TAP SHADE BUTTON

Continued on Page 2...


Setting Upper and Lower Limits of a Sivoia® QS Triathlon® shade with GRAFIK Eye® QS:

Continued from Page 1...


3. In the GRAFIK Eye® QS Shade button group associated with the shade, simultaneously press and hold the Open and Raise (up arrow) buttons for 5 seconds.

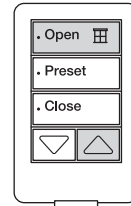

4. Use the Raise/Lower buttons to position the shade at the desired level for the upper limit (the maximum the shade is allowed to open).

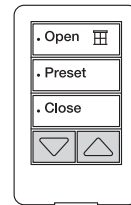


5. Press and hold the Open button for 5 seconds to store the current position as the upper limit. The Open button's LED will flash quickly for 2 seconds. The shade and control exit limit set mode automatically.

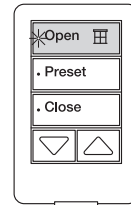


6. Set the lower limit: Repeat steps 2 and 3 to enter limit set mode.

7. Use the Raise/Lower buttons to position the shade at the desired level for the lower limit (the maximum the shade is allowed to close).

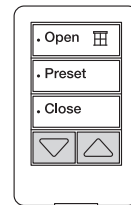

8. Press and hold the Close button for 5 seconds to store the current position as the lower limit. The Close button's LED will flash quickly for 2 seconds. The shade and control exit limit set mode automatically.

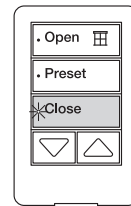

9. Repeat steps 1 through 8 to set the upper and lower limits for each Sivoia® QS Triathlon® shade.