




English

Designer-style Button Kits
RadioRA®-SR, RadioRA®2 and
HomeWorks®

Installation Instructions
Please Read Before Installing

SKD-1B, -2B, -3B, -3BRL, -4B,
-4FS*, -4S*, -4SIR*, -5B, -5FS*,
-5BRL, -6B, -6BRL, -7B

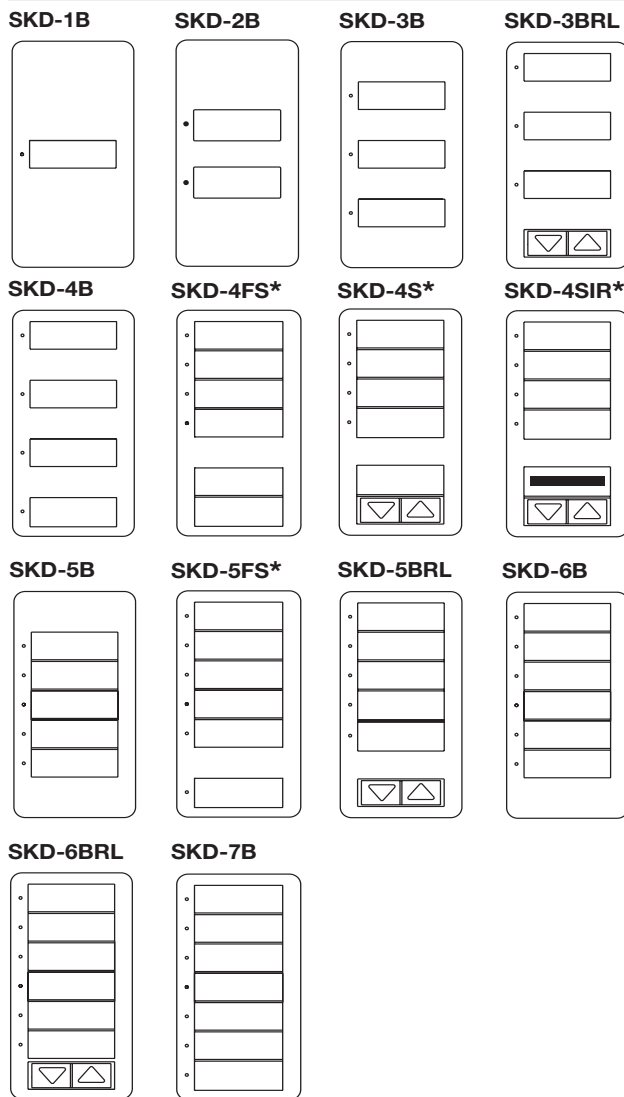

*RadioRA 2 and HomeWorks only

Technical Assistance:

U.S.A. /Canada: 1.800.523.9466
Mexico: +1.888.235.2910
Other Countries: +1.610.282.3800
24 hours a day, 7 days a week.

Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036-1299
Made and printed in the U.S.A. 7/09 P/N 043-100 Rev. C

Overview

These Designer-style Button Kits allow the customization of Designer-style Keypads in a RadioRA-SR, RadioRA 2 or HomeWorks system. Button Kits may be used to change the color and button configuration, and add engraving to clearly identify each button's function.

Important Notes

Mounting: Ensure all controls are correctly wired and mounted before installing button kits or wallplates. Ensure controls are free from debris (e.g. plaster, spackling compound) before installing button kits or wallplates.

Wallplates: Lutron Claro® and Satin Colors® wallplates are recommended for best color match and clean aesthetic appearance. Do not paint button kits or wallplates.


Cleaning: To clean, wipe with a clean damp cloth. DO NOT use any chemical cleaning solutions.

Engraving: The yellow Prepaid Engraving Certificate included with the Keypad can be redeemed for a custom engraved button / faceplate kit. To order an engraved button / faceplate kit please follow the instructions located on the Lutron website at <http://www.lutron.com/buttons>.


Installation

1. Remove wallplate and wallplate adapter from keypad (if applicable).
2. Remove currently installed button kit (if applicable). Using a small, flat blade screwdriver, remove button kit from keypad by gently prying it from the top.
3. Snap on the button kit by lining up the two tabs on the bottom of the button kit with the two slots in the keypad just above the bottom mounting screw. Using your thumbs, press in the bottom of the button kit, and then snap in the top. See **Button Kit Removal**.
4. Attach Lutron Claro or Satin Colors wallplate adapter and wallplate. See **Mounting Diagram**.
 - a. Loosely install keypad mounting screws.
 - b. Install wallplate adapter onto front of keypad. Tighten wallplate adapter mounting screws.
 - c. Tighten keypad mounting screws until wallplate adapter is flush to wall (do not over-tighten).
 - d. Snap wallplate onto wallplate adapter, and verify that buttons are aligned properly.
 - e. If buttons are misaligned, loosen keypad mounting screws appropriately.

Button Kit Removal

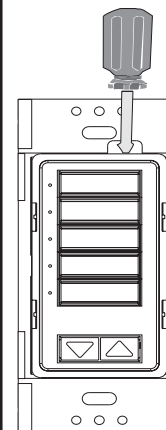

Mounting Diagram

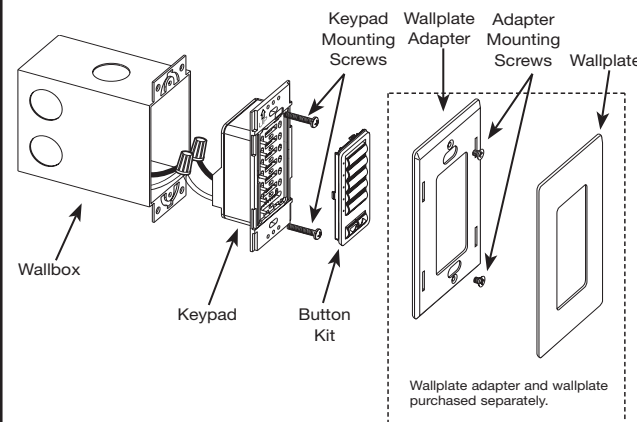

Warranty

For Warranty information, please see the Warranty enclosed with the product, or visit www.lutron.com/resiinfo.

This product may be covered by one or more of the following U.S. patents: 4,835,343; D436,930; D453,742; D456,783; D461,782; D465,460 and corresponding foreign patents. U.S. and foreign patents pending. Lutron, RadioRA, Claro, Satin Colors and the sunburst logo are registered trademarks of Lutron Electronics Co., Inc.

©2009 Lutron Electronics Co., Inc.

