



Single Dimmer With Accessory

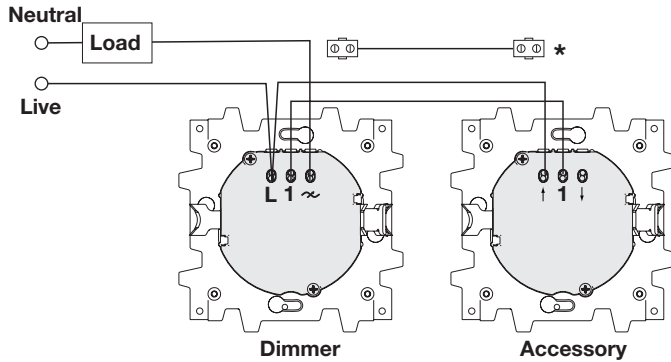


Single Dimmer With Switch

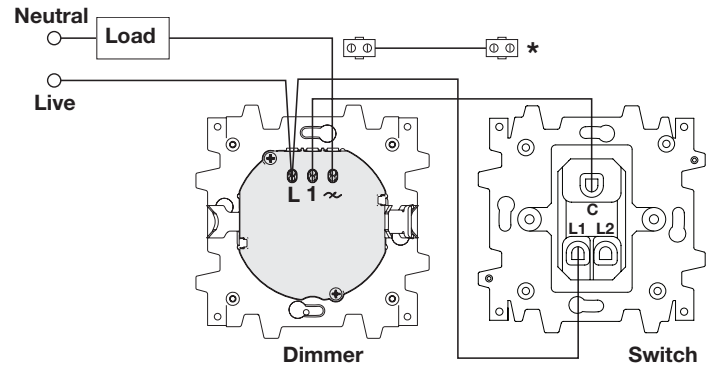


Note: Additional programming is required.

Dual Dimmer With Accessory

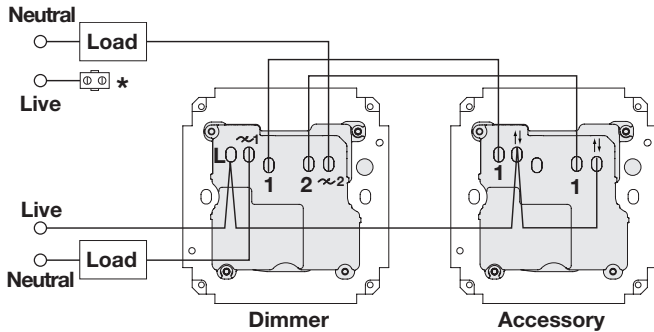

Dual Dimmer With Switch

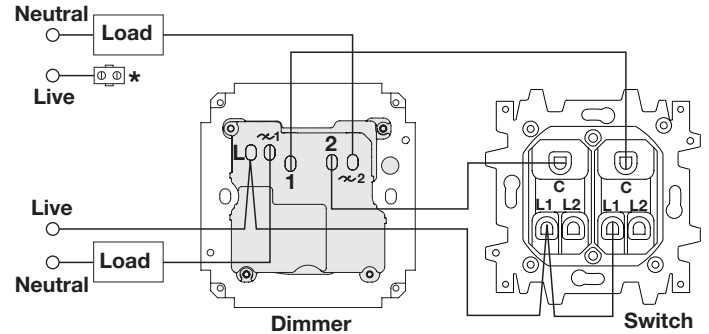

* **Note:** Follow national and local codes to terminate the wire.

Note: Additional programming is required on a zone connected to a switch.

Changing the Settings on Rania for Applications with 2-way Switches:

The first thing to be done is to enter the Advanced Programming mode Menu. To do so make sure the dimmer has power (LEDs should be glowing green), and that the lights are off. If the lights are on, press the Toggle button to turn them off.

The following needs to be performed with the Dual Rania powered on the zone that is wired with a 2-way switch.

- 1** From Electronic OFF – Rania powered, but lights turned off – press and hold Lower (down arrow button) and simultaneously press and hold the Toggle button (big rectangular button above Raise/Lower) until the bottom green LED starts flashing. Once this happens, release both buttons.
- 2** Press Raise (up arrow button) three times, until the fourth LED from the bottom starts flashing.
- 3** Press Toggle once. The bottom LED will start flashing again.
- 4** Press Raise once. Second LED should start flashing.
- 5** Press Toggle once. Fourth LED only should be flashing at this point.
- 6** Press and hold the Toggle button until all the LEDs stop flashing.

Important Notes:

There is a 1 minute timer that will automatically exit the Advanced Programming mode if there is no activity on the dimmer.

To restore the dimmer to factory defaults, repeat step 1 and with the bottom LED flashing, press and hold Raise and Toggle at the same time until the light level begins to rise.

