


Conference Room | New Construction

Title 24-2016

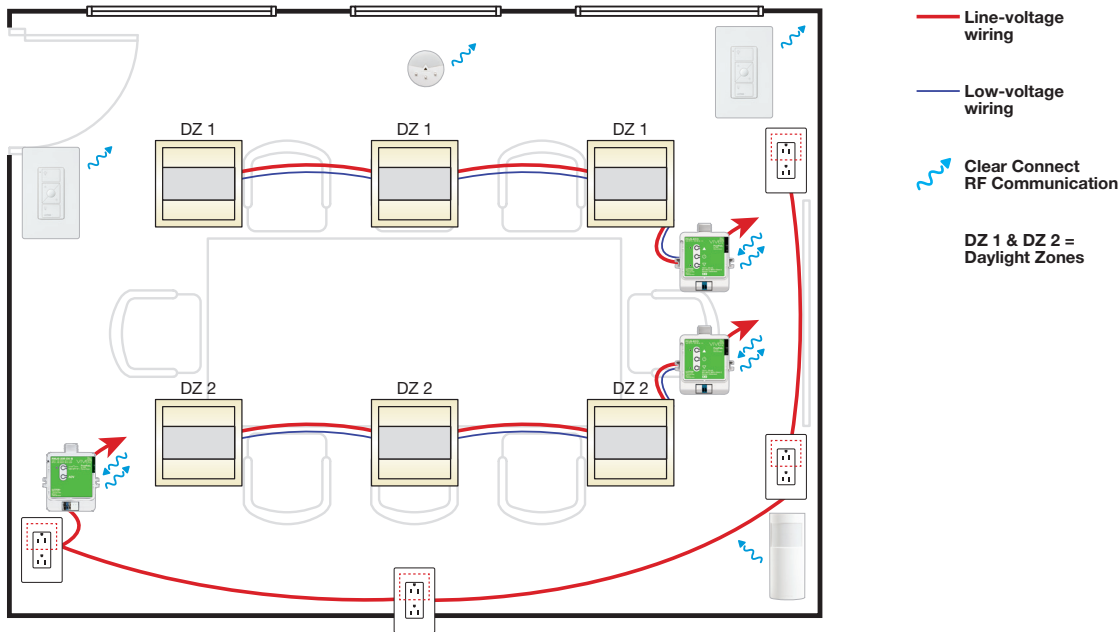

Symbol	Model Number	Description	Qty
	RMJS-8T-DV-B	PowPak dimming module with 0-10V	2
	RMJS-20R-DV-B	20A PowPak relay module	1
	LRF2-DCRB-WH	Radio Powr Savr wireless daylight sensor	1
	LRF2-VKLB-P-WH	Radio Powr Savr wireless corner-mount vacancy sensor	1
	PJ2-3BRL-GWH-L01	Pico wireless 3-button with raise/lower control	2
	PICO-WBX-ADAPT	Pico wallbox adapter	2
	HJS-1-FM	Vive wireless Hub	Shared

Control Functionality

Occupant Enters:

Lights do not automatically turn on when an occupant enters the space; lights must be turned on manually. Maximum light level is set to 80%. Controlled receptacles automatically regain power when occupant enters.

When Occupied:

Automatic: Overhead lights dim/brighten based on daylight availability. There are two perimeter daylight zones.
Manual: Occupant uses wall dimmer to set desired light levels for all lights.

Occupant Exits:

All lights automatically turn off 15 minutes after all occupants exit. 50% of all receptacles automatically turn off 15 minutes after all occupants exit.

System Events:

Demand Response: All lights automatically dim 20% during demand events.

Code Notes: For non-daylit conference rooms, all general lighting can be connected to a single 0-10V dimming module. Want to add a Vive wireless hub for more features? Go to lutron.com/vive for complete compatibility and design details. This solution requires 0-10V enabled ballasts and drivers by others.